


3 Hands / Date

TIME SETTING

[3 Hands / Date]

- 1) Pull out the crown to the first click.
- 2) Turn the crown anti-clockwise until the previous day's date appears.
- 3) Pull out the crown to the second click when the second hand is at the 12 o'clock position.
- 4) Turn the crown until the desired date appears.
- 5) Turn the crown to set hour and minute hands.
(Check that AM / PM is set correctly.)
- 6) Push the crown back in to normal position.
accordance with the time signal.

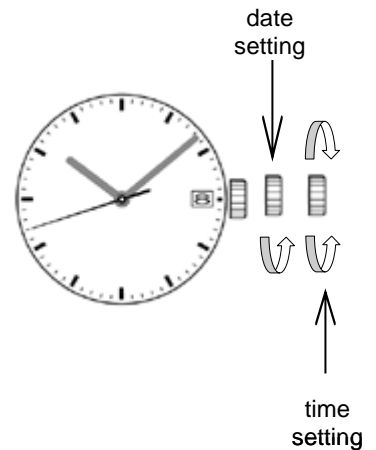

Note :

- * The date will change gradually between 9:00 P.M. and 4:00 A.M. Therefore, do not set the date during this time period or the date may not change properly. If it is necessary to set the calendar during that time period, first change the time to any time outside it, set the date and then reset the correct time.




17061 机芯操作手册

3针/单历

时间设定

[3 针/单历]

- 1) 拔出表冠至位置一。
- 2) 逆时针方向旋转表冠直至日历显示前一天之日期。
- 3) 秒针于12时位置时拔出表冠至位置二。
- 4) 旋转表冠直至显示目标日期。
- 5) 旋转表冠以调校时针和分针至目标时间。
(检查是否正确设定上/下午时间)
- 6) 依照报时信号，把表冠推回原位。

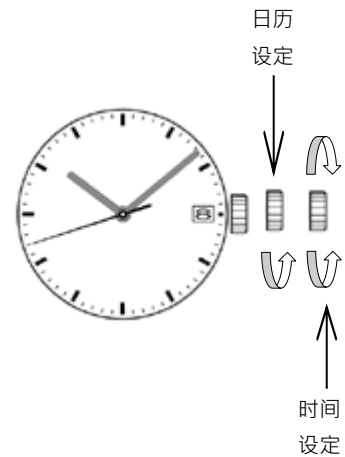

注意：

- * 日历显示会于晚上九时至早上四时之间慢慢转换。为免日历显示有误，请避免于该时段设定日历。如必须在该时段设定日历，请先把时间设定于时段外，再设定日历，最后重设正确时间。